



IDEAL NETWORKS

# SignalTEK II



## SignalTEK II Software Update Procedure

To update the Near End Unit to the current latest software version:

1. Copy the file SignalTEK-II-md5.bin to the root directory of a USB memory key
2. Ensure that the tester is connected to the mains power supply, or that the battery is fully charged
3. Switch the tester ON
4. Insert the USB memory key into the tester
5. Save any results stored in the tester (all data and settings will be lost following the software update)
6. From the HOME screen, select F3(SETUP) / SYSTEM / UPDATE
7. Select F1 (UPDATE)
8. Wait for the update to be completed

To update the Remote Unit to the current latest software version:

1. Copy the file SigTEK2.bin to the root directory of a USB memory key
2. Ensure that the tester is connected to the mains power supply, or that the battery is fully charged
3. With the tester switched OFF, insert the USB memory key into the tester
4. Press and hold the AutoTest button
5. Switch the tester ON. The LEDs will flash in sequence
6. Wait for the update to be completed, when the LEDs stop flashing.



**IDEAL NETWORKS**

IDEAL INDUSTRIES LIMITED  
Stokenchurch House, Oxford Road, Stokenchurch,  
High Wycombe, Bucks, HP14 3SX, UK.

[www.idealnetworks.net](http://www.idealnetworks.net)

A subsidiary of IDEAL INDUSTRIES INC.

